


Vitotrol 100-E

Wireless remote control for 1 heating circuit

Safety instructions

 **Please follow these safety instructions closely to prevent accidents and material losses.**

Safety instructions explained


 **Danger**
This symbol warns against the risk of injury.

Note
Details identified by the word "Note" contain additional information.

Target group

These instructions are intended for system users.

This appliance can also be operated by children aged 8 and older, as well as by individuals with reduced physical, sensory or mental faculties or those lacking in experience and knowledge, provided such individuals are supervised or have been instructed in the safe use of this appliance and any risks arising from it.

 **Danger**
Wireless signals can interfere with electronic medical devices, particularly pacemakers, hearing aids and defibrillators. If any such equipment is fitted, users should avoid being in the immediate vicinity of operational wireless components.

Installation and adjustment

- All settings and work on the device must be carried out as specified in these instructions.
- Observe minimum clearances to ensure reliable signal transmission.

Operation of the system

- Only operate the devices inside closed buildings.
- Never operate devices in rooms where there is a risk of explosion.

Safety instructions (cont.)

- Protect devices from:
 - Moisture
 - Dust
 - Liquids
 - Vapours
 - Direct sunlight
 - Other direct thermal radiation
- After a restart, check the status of the wireless components.



Danger

Damaged equipment poses a safety hazard. Check the appliance for external damage. Never start up a damaged appliance.

Auxiliary components and individual parts

For replacement, use only spare parts supplied or approved by Viessmann.

Overview of controls

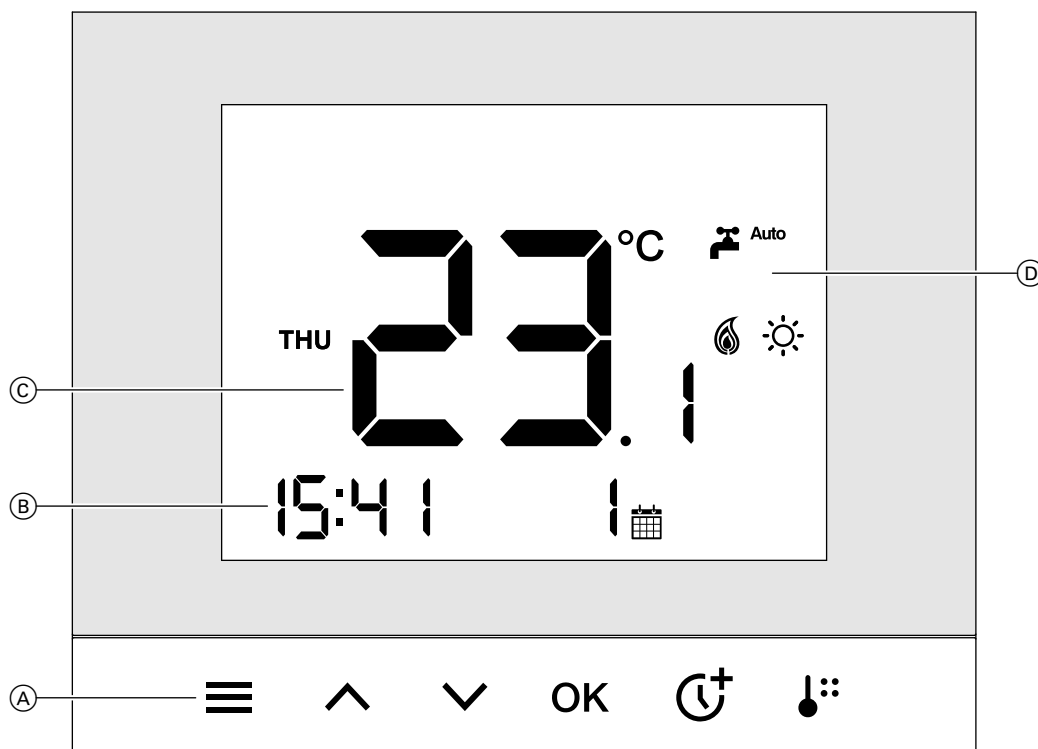 


Fig. 1



- (A) Operating buttons
- (B) Current time

- (C) Current actual room temperature
- (D) Symbols

Operating buttons



- ☰ Settings
- ^ / v Scroll through the menu.
- OK Confirm selection or change.

Overview of controls (cont.)





-  Confirm the function **"Extended heating"/"Extend time phase once"**.
-  Select the set room temperatures for the temperature levels.

Symbols on the display



General symbols

-  Low power radio connection to the Viessmann appliance has been established.
-  Child lock is active.




Temperatures

-  Room heating with reduced room temperature
-  Room heating with normal room temperature
-  Room heating with comfort room temperature
-  Backs up DHW heating in On/Off status or by schedule (Auto mode), depending on the Viessmann heat generator.



Operating programs

-  Frost protection is active.
-  Heating is active.



-  **"Extended heating"/"Extend time phase once"** is active.

-  **Auto** DHW is heated according to the time program.
-  **Off** DHW heating is permanently off.
-  **On** DHW heating is permanently on.

Messages

-  Fault
-  Replace battery.








Symbols during operation

-  While settings are being made.
-  Time program: Active time phase

Settings menu

Note

Depending on the equipment level of your system, not all of the settings and checks listed may be available.
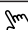
| Settings | Meaning |
|--|--|
| SCHEDULE | Time program for room heating |
| TIME DATE | Time and date |
| | WEEK TYPE |
| | FORMAT |
| DHW  | DHW heating |
| | DHW ONOFF |
| | DHW SCHED |
| | SETPOINT |
| TEMP PROF | Temperature level for room temperature |
| | REDUCED  |
| | NORMAL  |
| | COMFORT  |
| DEV INFO | Device information |
| | BATT  |
| | RF RANGE  |
| | SW VERS |
| | ADJUST |
| LANGUAGE | Language |
| CHILDLCK  | Lock out controls (childproofing) |
| RESET | Reset |

Time programs

In the time programs you determine what your heating system should do at what time. For this, divide the day into sections. These are called time phases. Subject to the system equipment level, up to 4 time phases are available. For each time phase, you define a start time and an end time.

 
Time program for room heating

Different temperature levels with adjustable room temperatures are active within and outside these time phases:


- Reduced room temperature **"REDUCED"** ☾, automatically active outside the active time phases, e.g. at night or during regular absences
- Normal room temperature **"NORMAL"** ☀, adjustable within active time phases
- Increased comfort room temperature **"COMFORT"** ⌞, adjustable within active time phases

Factory setting:

- **One** time phase with temperature level **"NORMAL"** from 06:00 to 22:00 for all weekdays to 20 °C
- Outside active time phases, temperature level **"REDUCED"** to 3 °C

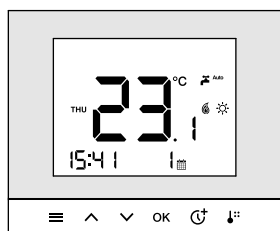

 1. ☰
2. ⬆ / ⬇ for **"SCHEDULE"**
3. OK to confirm

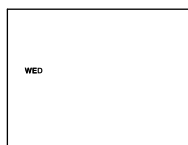

1. ⬆ / ⬇ for a group of days or a single day
2. OK to confirm



Set the beginning of the first time phase:

1. ⬆ / ⬇ to set the hour.
2. OK to confirm
3. ⬆ / ⬇ to set the minutes.
4. OK to confirm



Set the end of the first time phase:

1. ⬆ / ⬇ to set the hour.
2. OK to confirm
3. ⬆ / ⬇ to set the minutes.
4. OK to confirm

 


Set the temperature level of the first time phase:

1. ⬆ / ⬇ for temperature level **"NORMAL"** or **"COMFORT"**
2. OK to confirm

Note

Between the **active** time phases, the rooms are heated to a reduced temperature.

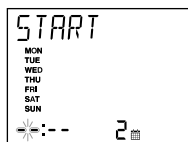


Indicator for start time flashes.

1. Set further time phases 2 to 4 if required. If no further time phase is to be set, do not set the start time.
2. OK to complete the setting of time phases.


Time program for DHW heating

Factory setting:

 - 05:00 to 22:00 to 50 °C

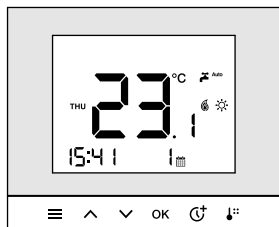

 1. (three horizontal lines)
2. / for "DHW"
3. **OK** to confirm
4. / for "DHW SCHED"
5. **OK** to confirm

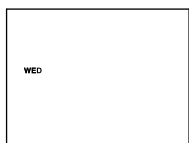


1. / for a group of days or a single day
2. **OK** to confirm




Set the beginning of the first time phase:

 1. / to set the hour.
2. **OK** to confirm
3. / to set the minutes.
4. **OK** to confirm

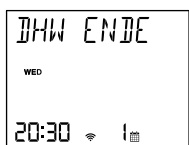

Set the end of the first time phase:

 1. / to set the hour.
2. **OK** to confirm
3. / to set the minutes.
4. **OK** to confirm

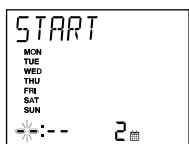

Indicator for start time flashes.

1. Set further time phases 2 to 4 if required. If no further time phase is to be set, do not set the start time.
2. **OK** to complete the setting of time phases.



Viessmann Climate Solutions SE
35108 Allendorf / Germany
Telephone: +49 6452 70-0
Fax: +49 6452 70-2780
www.viessmann.com



Viessmann Limited
Hortonwood 30, Telford
Shropshire, TF1 7YP, GB
Telephone: +44 1952 675000
Fax: +44 1952 675040
E-mail: info-uk@viessmann.com

6204928 Subject to technical modifications.